

LEVEL ALARM AUTODIALER

QUICK START INSTRUCTIONS



1. HARDWARE SETUP

- Open the case by pushing tabs in.
- Thread the phone line and AC adapter cords through the top hole in the back cover.
- Plug the phone line into the “LINE” socket.
- Plug the AC adapter cord into the AC jack marked “DC PWR”.
- Mount unit on a wall. Line of sight from the level alarm is preferable.

2. RECORD A VOICE MESSAGE

- Press [R/P] for 2 seconds and release. Display will show **rEcord**
- Speak a message up to 40 seconds, then press and release [R/P] again to end recording. The display will show **PLAY** and playback the message.

3. PROGRAM THE NUMBER(S) TO CALL

- Press [MEM] key. **M**
- (within 5 seconds) select a memory location from 1-9
- Enter a phone number using keypad.
- Press [MEM] key again within 5 seconds of last digit pressed to accept the number.
- Press [MEM] key again to accept 3 redial attempts. **rEdIAL 3**
- Press [MEM] key again to accept 3 repeats of the message during the call. **rREPEAT 3**

4. SET THE TIME CLOCK

 The clock displays 24 hour time.

- Press [L] + [4]. Display will show **L 4 12:00**
- The first digit will be flashing. Using the keypad enter the number you want the flashing digit to change to. For example to set time to 1:30PM, enter: **1+3+3+0**.

OTHER POINTS

- If using a PABX system, see P17 of the manual. (default setting is a regular household phone line)
- The dialer is now ready respond to signals from the level alarm.
- A delay feature that allows up to 75 second to correct level before a call is made. (see p19 in manual)
- Put the dialer battery on a PM schedule to be changed every 10 years. (different than the level alarm)